
Søuld

1. UNBOXING

Be careful when handling the product as the edges are fragile. A general advice is to keep the product in the box until installation.


Gently use a knife to open the attached tape - See dashed lines below. Only cut in the tape and do not cut into the cardboard, as you might make damages on the product. Do not take the <u>Frames</u> out of the box before all tape is detached from the box.

Please read the General Installation Instruction for using and handleling Søuld Acoustic Mats at www.sould.dk or directly at this <u>link</u>

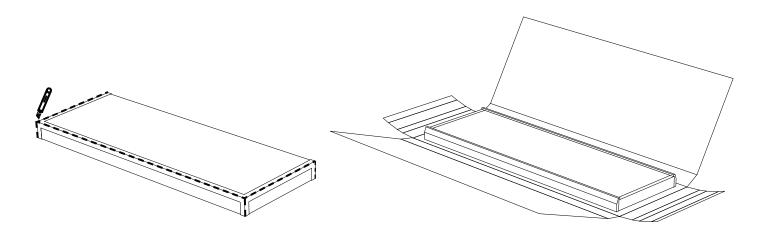


2. CONTENT OF BOX


Make sure everything is there.



3. TOOLS NEEDED

- Pencil
- Drill
- Rawlplug suitable for the wall type
- Screws suitable for the wall type
- Ruler
- Spirit level or laser level
- Hammer
- Vacuum-cleaner







4. MEASUREMENTS

It is important to take plenty of time for the measurement, as the precision of this work will determine the final result.

Use a level as guiding point for the measurements. A multi line laser level is preferable.


Place the wood bracket at the desired height on the wall and make sure it is level. Use a pencil to mark the position of the holes.

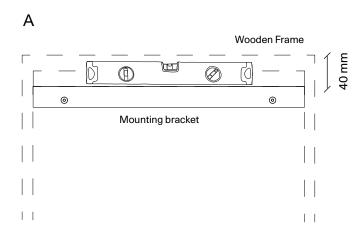

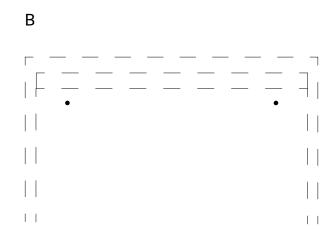


5. DRILL

Use a suitable drill that matches the type of wall

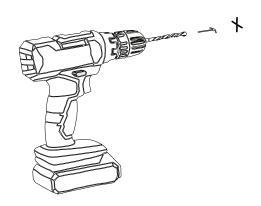


6. CLEAN + RAWLPLUGS

Clean the holes

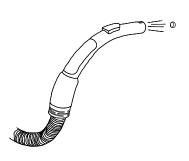


and install a suitable rawlplugs that matches the



SØULD INSTALLATION INSTRUCTIONS


7. MOUNTING THE BRACKET

The wooden bracked is made for countersunk screws. Make sure to choose a suitable screw that match the material of the wall. We generally recommend screw length to be at least 50mm.

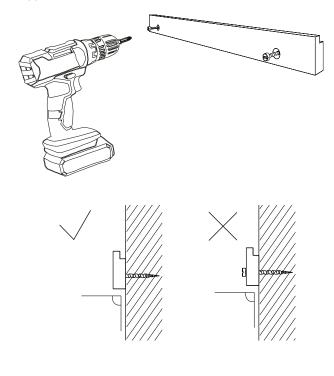


8. MOUNTING THE FRAME


Lift the frame and place it on the bracket. Make sure that the back of the frame is flush with the wall before lowering the frame onto the bracket.

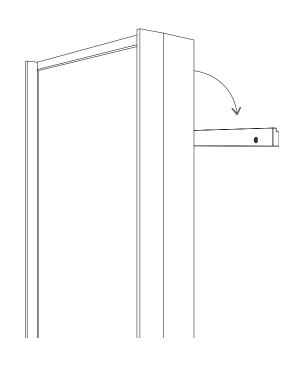


9. CHECK THE INSTALLATION

Make sure that the frame is correctly attached and secured to the bracket to prevent it from falling down accidently.

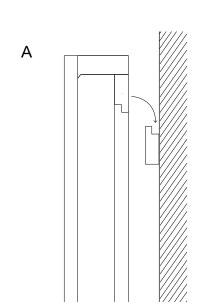

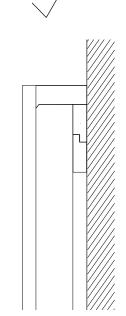

В

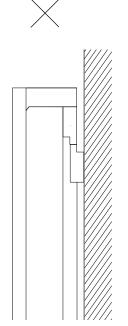

SØULD